



LOGIC T10B

10" HD WI-FI TABLET
Quick Start Guide

Please read carefully before using.

Table of Contents

THANK YOU 3

Package Contents..... 3

Features..... 4

GETTING TO KNOW THE INTERNET TABLET

..... 5

About the Touchscreen 8

Protective Film..... 8

Touchscreen Actions..... 8

About the Orientation Sensor 9

Charging the Tablet..... 10

Inserting Memory Card..... 10

Resetting the Tablet..... 11

GETTING STARTED 12

Turning the Tablet On and Off 12

Turning the Screen On and Off (Standby) 13

Unlocking the Screen 13

Home Screen at a Glance..... 14

About Applications..... 15

Preinstalled Applications..... 15

Installing Applications..... 16

About Widgets..... 17

About Notifications..... 18

CONNECTING TO THE INTERNET 19

Requirements..... 19

Connect to a Wi-Fi Network..... 20

BROWSING THE WEB 22

OPTIONAL CONNECTIONS 26

Connecting to a Computer..... 26

Connecting Headphones..... 27

Using the USB Full-Size Adapter..... 28

Connecting a Keyboard..... 28

Connecting a Storage Device..... 28

SETTING THE SYSTEM OPTIONS 29

SPECIFICATIONS 30

WARRANTY 31

Thank You

Congratulations on your purchase of this Internet Tablet. This guide is provided to help you get quickly started with your tablet; please read it carefully and save it for future reference.



To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from whom you purchased this product.

- Internet Tablet
- USB Cable
- Case with Bluetooth Keyboard
- Power Adapter

Features

GB sup- ported)

- ④ Browse the Web
Visit your favorite websites
- ④ Check your e-mail
Keep in touch with friends and family
- ④ Watch YouTube™ videos
Browse the world's most popular video sharing community
- ④ Read your favorite books
Download thousands of books with the included E-book reader *
- ④ Discover thousands of apps for Android™
Games, applications and more with the installed marketplace
- ④ Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 b/g/n networking
- ④ Enjoy your media library anywhere
Portable powerhouse plays popular music, video and photo formats
- ④ MicroSD memory card reader
Increase your storage capacity (up to 32

4 Built-in camera
Convenient front-facing camera

4 Automatic orientation detection
Read any way you want; the display adjusts automatically!

 
Reading books in the ePub format requires the included E-book reader application.


Getting to Know the Internet Tablet


Unit at a Glance


Name		Description
1	Camera	Front Camera


1

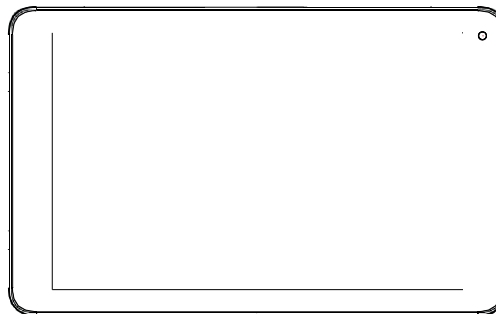

	Name	Description
2	Power Key	Press to turn the unit on, or to turn the screen on and off.
3	Volume +key	Press to increase the volume level.
4	Volume -key	Press to decrease the volume level.
5	USB port	Connect a storage device to the tablet.
6	Headphone jack	Audio output connection for head-phones.
7	SD Cardslot	Load external microSD memory cards here.
8	MC	Receiving sound for recording
9	HD port	Connect to monitor for output high definition video
10	Reset	Press to reset the tablet if it freezes or otherwise behaves abnormally. (Use a paperclip  and hold it to get press this key.)

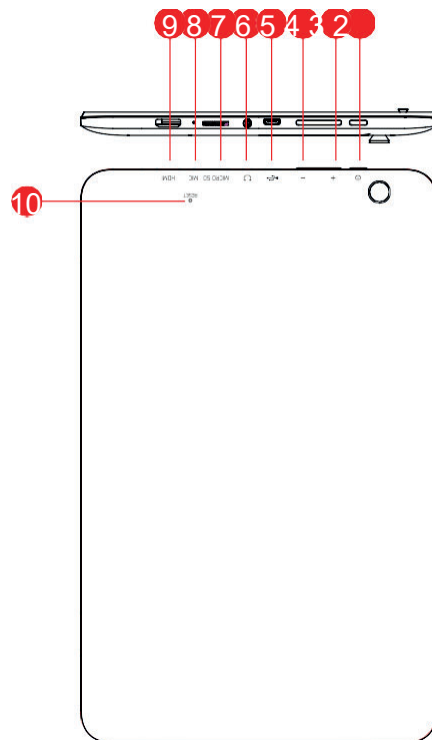 

Name		Description
11		Rear-facing camera
12	Speaker	Speaker output is automatically muted when using headphone jack.

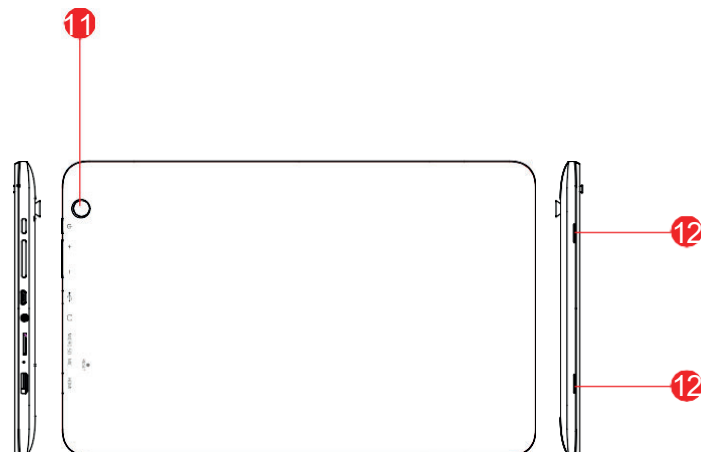 

About the Touchscreen

Your tablet comes equipped with an easy-to-use touch- screen which allows access to the tablet's functions.

Use your fingertip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.



To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touch- screen controls.

three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip to manipulate icons,

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the

buttons, menu items, the on-screen keyboard and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items and the letter/symbols of the on-screen keyboard), simply touch it with your fingertip.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip until the action occurs.
Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip, move your fingertip on the screen until the item reaches its target destination.

Swipe:	<p>Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view.</p> <p>To swipe, touch the screen and then quickly move your fingertip across the screen without lifting your fingertip.</p> <p>Do not pause on the screen with your fingertip at the initial point of contact or you may accidentally drag an item instead.</p>
Double-tap:	<p>Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a web- page</p>

About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).



The orientation sensor can be turned on and off in the Display settings menu.

Charging the Tablet

The current battery status will be always displayed in the lower right of the screen in the system information bar.

The battery icon  will change in accordance with the battery status.

When connected to the DC charger, the status area on the bottom bar will display the  charging icon. Note the lightning symbol inside the battery icon.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

Inserting a Memory Card

The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:

- ④ Increase the memory capacity of your tablet
- ④ Play media files stored on the memory card (music, video or photo files).

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down and towards the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.



Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot. If you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

Avoid touching the gold contacts of the



 
The battery used in this device may cause a fire or chemical burn if mistreated. Do not disassemble, incinerate or heat the device. Do not leave the device in direct sunlight or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label, as this may result in a fire or electric

To release and remove a memory card:

slot.

1 UNMOUNT the memory card.

- a. In the home screen, tap the Launcher Tab and then touch Settings to show the settings menu.
- b. Touch Storage to show the storage settings.
- c. Touch Unmount SD card to prepare the memory card for safe removal.

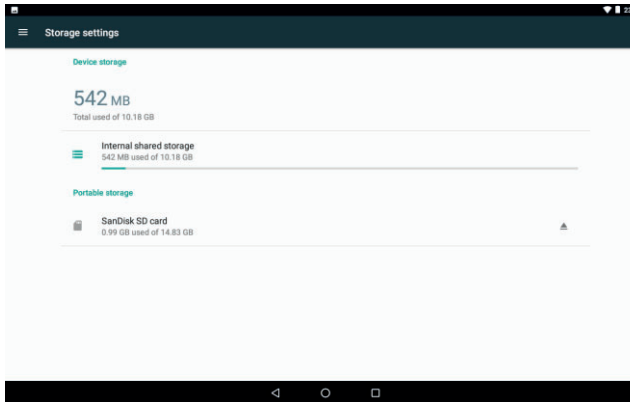

- 2** Push the card further into the slot until you hear a click. The card will spring out of the

3. Grasp the card by its edge to remove it.

Resetting the Tablet

Reset the tablet if it should freeze and does not respond or otherwise malfunctions.

1. Disconnect your tablet if it is connected to a computer.
2. Push and hold down the power button until the tablet powers off. Then push the power button one more time to restart the tablet.



To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Getting Started

Turning the Tablet on and off

 
To turn the tablet on:

Press and hold the Power key until the LCD screen turns on. Wait until the home screen appears. The tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the confirmation message appears.

2. Touch OK to turn off the tablet.

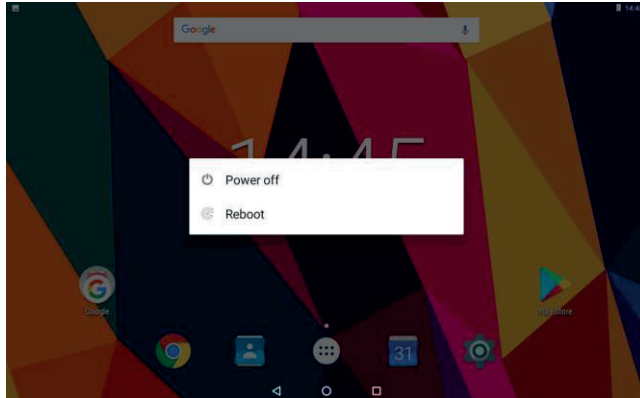

Turning the Screen On and Off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.



To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Sleep option can be found in the Display menu.

 
Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, touch and drag the Lock icon to the edge of the circle that appears.




If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the Security settings menu.

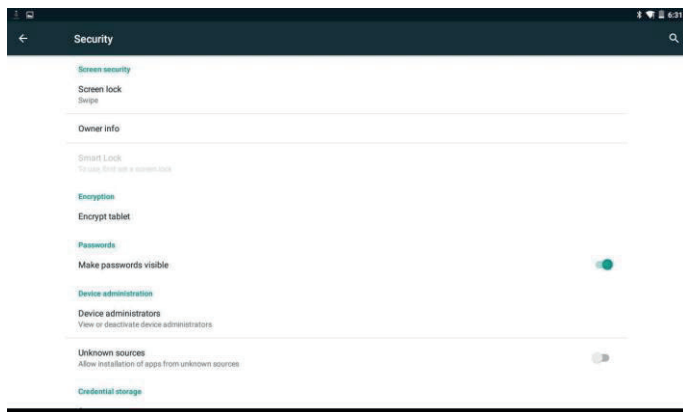

WARNING: Please write down your password/ pin/lock pattern. Misplacing or forgetting this will lock the user out. Recovering the unit will reset the device back to factory defaults. **ALL YOUR DATA & PROGRAMS WILL BE LOST.**

Home Screen at a Glance

 The Home Screen is the starting point for all of the features of your tablet.

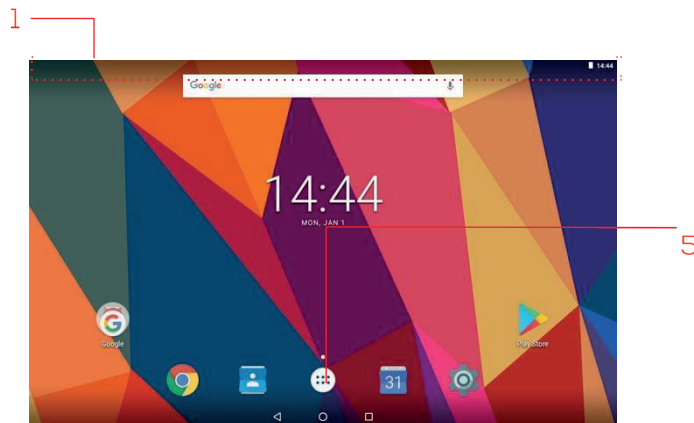


Name		Description
1	Notification Bar	Shows notification icons such as time, battery level and the network signal strength; touch the bar to open the full Notifications panel. Touch a Notification icon to display more detail.

Name		Description
2	Back	Touch to go back to the previous screen.
3	Home icon	Touch to go back to the central Home screen.
4	Recent Apps	Touch to display the list of thumbnail images of apps you have worked on recently. Touch an App to open it.
5	Launcher Tab	Open the Launcher to view the list of all Applications installed on the tablet. Touch the Launcher tab to open the Launcher.

About Applications



 To open an application, touch the application icon on the home screen or in the Launcher.

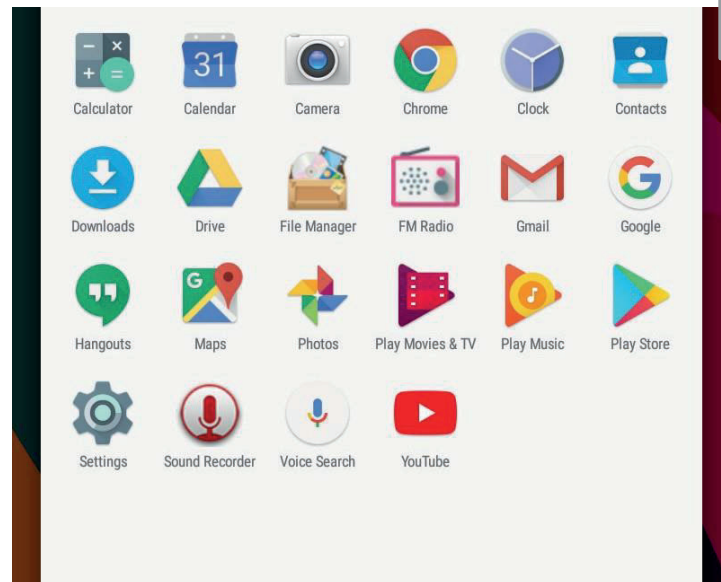




Launcher screen:



Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:

 Chrome	Browse the web.
 Calendar	Display the calendar or record events and appointments to manage your schedule.
 Calculator	Perform simple mathematical operations.
 Camera	Take pictures or videos with the front-facing camera.
 Clock	View the current time, or set an alarm.

 File Manager	View and manage files stored on the tablet.
 Gmail	Check your e-mail.
 Photos	View photos and videos, plus edit photos.
 Settings	Access the settings menu to adjust the tablet's options.
 Play Music	View videos.

Installing Applications

You can also download and install additional applications from the play store, the web browser or other sources.

The tablet must be set to allow installation of applications from non-market sources. The unknown sources option can be set in the Application settings menu.

About Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

Adding Widgets to a Home Screen

1. Navigate to the Home screen on which you want to place the Widget.
2. Touch the Launcher Tab.
3. Touch WIDGETS to show all widgets and then hold on a widget icon to add it to the Home screen.

Removing Widgets

 
Touch and hold the Widget until Remove icon appears at the top of the screen, then drag the Widget to the Remove icon to remove it.

About Notifications

The icons that appear in the Notification bar at the bottom right corner of the screen alert you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

- ④ Touch the Notification bar to open the Notifications panel.

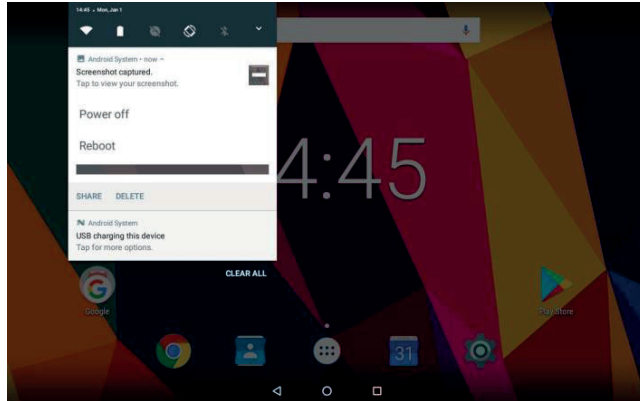

To respond to a Notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

To close the Notifications panel:

- ④ Touch any other area of the screen except the Notifications pane or;
- ④ Touch the Back icon.

Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet.

Wireless Wi-Fi technology can provide Internet access to tablets for 30 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g/n connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g/n connections as well.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.



You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.




A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be

found on the administration webpage of your wireless router.

Connect to a Wi-Fi network


The Notification bar displays icons that indicate your tablet's Wi-Fi status.

	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1 Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

- a. Go to the Home screen: Touch the Home icon.
- b. Open the Launcher screen: Touch the Launcher Tab, then touch Settings.
- c. Open the Wireless & Networks menu: Touch WIRELESS & NETWORKS.
- d. Open the Wi-Fi settings menu: Touch Wi-Fi.

 
- e. Make sure that the Wi-Fi option box is set to ON. Touch and slide the block to the right to enable the Wi-Fi connection.

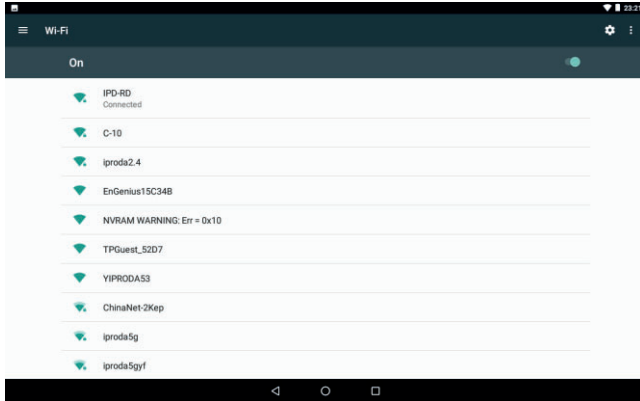

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

2 Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

 


If a network that you have connected to previously is found, the tablet will connect to it.

If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the SCAN icon located on the

If the network is open, the tablet will prompt you to confirm connection to the network. Touch Connect to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm.

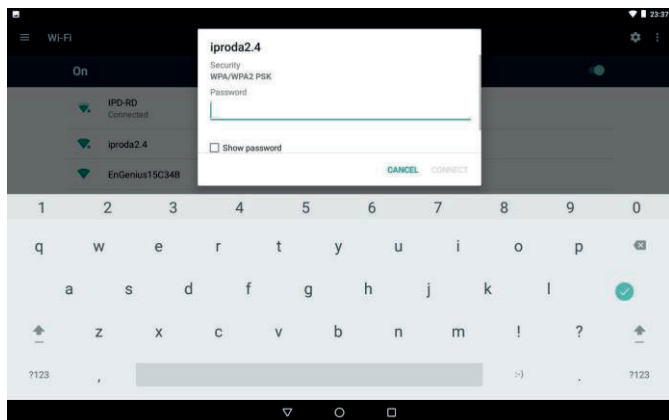

When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.



Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the tablet must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.


To open Browser, touch the Browser icon on the Home screen or in the Launcher.






Name		Description
1	New window (+)	Creates a new browser window.
2	Address bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web.
3	Add bookmark icon	Touch to add bookmarks.
4	Audio input	Touch the icon to input by voice.

Some common Browser actions are described below.

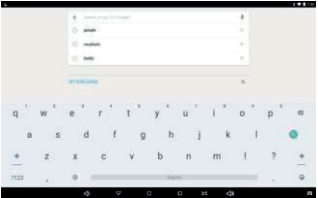4 To go to a webpage.

1. Touch the Address bar at the top of the Browser screen. The keyboard will open automatically. (If the address bar is not visible, drag the page down to return to the top of the Browser screen.)	
2. Use the keyboard to enter the address (URL) of the webpage (e.g., www.google™.com).	
3. Touch Enter key to open the webpage.	

- 4 To bookmark a webpage.**
Bookmark your favorite webpages in order to visit them quickly without entering a URL.

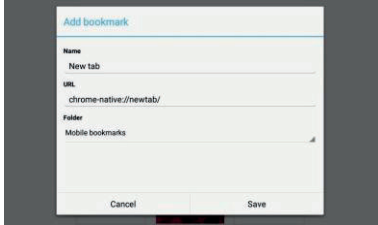1. Go to the webpage that you want to bookmark	
2. Touch the Add Bookmark icon.	
3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch OK to finish adding the	

4 To go to a bookmarked webpage.

1. Touch the go to Bookmark icon.	
2. Touch a bookmark tile to open it.	

4 To delete a bookmarked webpage.

1. Touch the go to Bookmark icon.	
2. Touch and hold a bookmark tile to open the option menu.	

3. Touch "Delete bookmark".

4. Touch "OK" to confirm.

Browser menu

While viewing a webpage, touch the icon shown on the right to open the Browser menu, the icon is located on the top right corner of the screen. The options are:



- Refresh: Refresh the current webpage.
- Forward: Go to the next webpage.
- New tab: Open the webpage in a new window, under a new tab.
- New incognito tab: Open the webpage in a new window under a new tab and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of going incognito.
- Share page: Use Email to send the webpage URL.
- Find on page: Search for content on the

current page.

- ④ Request desktop site.
- ④ Save for offline reading: Save this page onto the internal memory, then you can read it when the internet connection is disabled.
- ④ Page info: View information about the current paging including the URL.
- ④ Settings: Customize the Browser.

Optional Connections

Connecting to a Computer

Connect the tablet to a computer to transfer files.

1 Connect your tablet to the computer.

 
With the included USB cable:

- 4 Plug the small end of the cable into the USB 2.0 hi-speed connector of the tablet.
- 4 Plug the large end of the cable into an available USB 2.0 hi-speed port on the computer.

When your tablet is connected, a USB icon will appear in the Notification bar.



- 4 Touch the Notification bar to open the notifications panel.

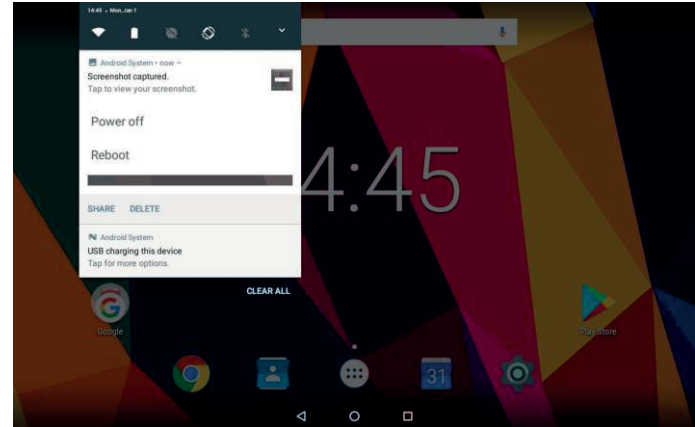

The Tablet's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.

2 Mount the storage drive.

- 4 Touch USB connected to mount the tablet's built-in storage, then touch "Turn on USB storage" and "OK" when prompted to confirm. When mounted, you can copy files to/from your computer.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

Connecting Headphones

Connect a pair of headphones (or earphones) to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones and then slowly raise the volume to a comfortable listening level.

 
The headphones must have a 3.5 mm (1/8 in) plug. When headphones are connected, speaker output will be disabled automatically.



Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the tablet. The adapter converts the Micro USB port on the tablet into a USB On-the-Go (OTG) connector.

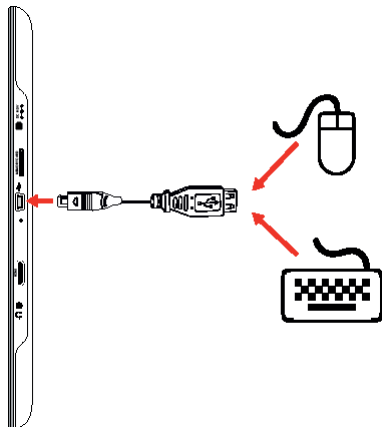

You may also use this connection to add a mouse to the tablet.

The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub.

Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the tablet (e.g., a USB flash memory drive).



This connection supports a maximum storage size of 32 GB. For additional storage capacity, a microSD card can be added to the tablet.

Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the tablet.

Use the included USB full-size (Type A) adapter to connect a keyboard to the tablet.

Setting the System Options

Open the system settings menu to adjust how the tablet looks and functions.



Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.

 
To open the Settings menu:

- 1 From the Home screen, touch the Launcher Tab.
- 2 Touch Settings to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust settings on the right.



Please refer to the manual for a description of the items in the Settings menu.

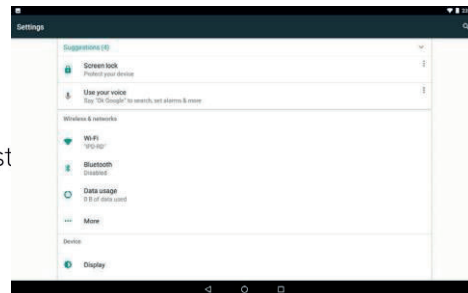

Specifications

Processor	MTK65
GPU	Mali 720
RAM	1GB
Storage	16GB flash built-in microSD card slot(max.32GB supported)
Display	10.1" FHD, capacitive touchscreen
Networking	WiFi IEEE 802.11 a/b/g/n
Audio Output	3.5 mm headphone
PC Interface	USB 2.0
Additional Features	Front/Back facing camera Built-in microphone Mono speaker
Operating System	Android 7.0
Power	Rechargeable Li-poly battery power adapter
Playback Time (hours) *	Upto 12 hours music, 3 hours video, 3 hours web browsing

* Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.

Warranty

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specific Absorption Rate (SAR) information:

This product meets the government's requirements for exposure to radio waves. The guide-lines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm for body worn must be maintained between the user's body, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY

Limited Warranty

The Logic brand and its products are owned by Swagtek, Inc. This is a limited warranty for the product purchased and contained in this package (the "Product"). For Astro Tab to honor this limited warranty, the original retail purchaser ("you") must present a valid proof of purchase of the Product, such as a receipt.

This warranty is void if Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage, or tampering of the bar code of the Product unit. This warranty is a limited warranty for repair/replacement of product, subject to the conditions set forth herein.

INSPIRA TECHNOLOGIES LLC IS NOT LIABLE FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES AND COMPANY'S TOTAL LIABILITY HEREUNDER SHALL NOT EXCEED AN AMOUNT GREATER THAN THE RETAIL PURCHASE PRICE OF THE PRODUCT.

Subject to the applicable provisions set forth herein, with regard to this limited warranty, you are responsible for all costs in connection with the shipping and handling of the Product to Swagtek, Inc., and Swagtek, Inc. is likewise responsible for all shipping and handling of the Product back to you. Swagtek, Inc. bears no risk of loss of the Product in connection with the transportation and shipment of the Product in any way relating to this limited warranty.

90 DAYS Parts & Labor

Limited Manufacturer's Warranty – Swagtek, Inc. warrants to you as the original retail purchaser of the Product, that should the Product have any defect, under normal conditions, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge, if submitted to Swagtek, Inc. within a period of 90 days from the date of purchase of Product. This warranty only covers manufacturer defects and the Product must be returned to Company in its original condition. Proof of Purchase, in the form of a valid

receipt, is required.

1 YEAR Limited Parts

The 1 year limited parts warranty gives you the option to return Product to Swagtek, Inc. for repair/replacement. You will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

Contact Us

Our email address is: support@logicmobility.com

Please make sure to include the model number and brief description of the problem you are encountering.

Android, Google Play, and Google Chrome are trademarks of Google LLC.

