



LOGIC
GC2
WIRELESS GAMING CONTROLLER

 
USER MANUAL

For Android / IOS 13.0+ / PC / Ps4 / Ps3 / Switch

INDEX

1. KEY FUNCTION INSTRUCTION.....	4
2. SLEEPING MODE & RECONNECT.....	4
3. POWER OFF.....	5
4. RGB LIGHTING CONTROL.....	5
5. ANDROID V3 MODE (KEY MAPPING MODE)	5
6. SWITCH KEY SET.....	5
7. EDIT KEY CONFIGURATION	6
8. ANDROID GAME CONTROLLER MODE.....	7
9. XBOX WIRELESS CONTROLLER MODE FOR ANDROID & IOS 13.0 ABOVE.....	8
10 MFI CONTROLLER MODE FOR IOS 13.0+	8
11. N-S CONTROLLER MODE	9
12.P4/P3 CONTROLLER MODE.....	10
13. UPDATE.....	10
14. PC WIRED CONTROLLER MODE.....	11
15. TURBO / AUTO FUNCTION.....	12
16. SPECIFICATIONS.....	12
17. RESET.....	12
18. FAQ.....	13
19. WARRANTY CERTIFICATE.....	14

KEY FUNCTION INSTRUCTION

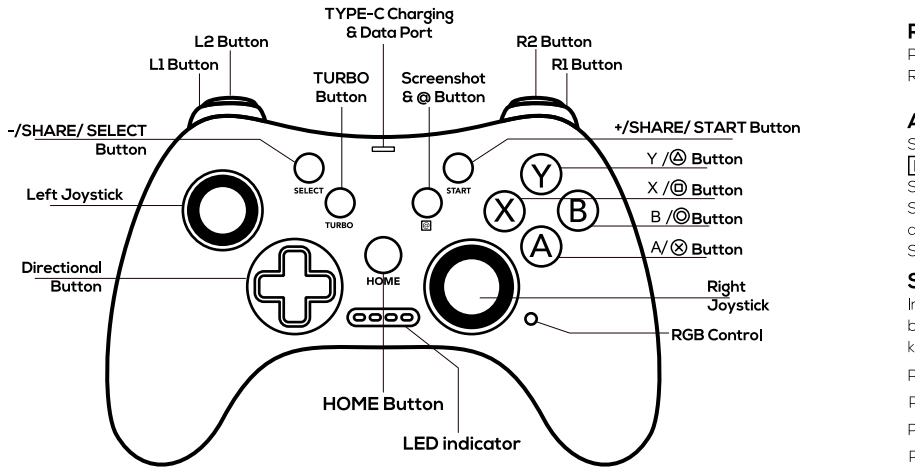

SLEEPING MODE & RECONNECT

Sleeping Mode: The controller will turn into sleeping mode automatically without any operation within 5 minutes.
Reconnection: Press HOME button to reconnect to the last mode which you connected before.

POWER OFF

Press HOME button long with 3-5 seconds, the controller will power off with all LED lights off.

RGB LIGHTING CONTROL

Press button to switch the light mode:
RGB Breathing Light Mode - Long Light Mode (stop switching color) - Light Off;

ANDROID V3 MODE (KEY MAPPING MODE)


Step 1: Press **[A+HOME]** button to power on the gamepad, **[LED1]** will be twinkling and wait for pairing.
Step 2: Open the interface of **[Settings]** on android device, open **[Bluetooth]**.
Step 3: Scan the devices and get the name of **[GC2]** click the device into **[Pairing and Connect]** automatically.
Step 4: **[LED1]** indicator will be long on after connected successfully.

SWITCH KEY SET


In V3 mode, after the gamepad is connected to the phone, the default button layout is "No.1". The button layout can be modified according to the virtual button of the game. According to the different game, there are four groups of key layout can be set, and the keys can be switched while playing different games.

Press **[+HOME]** to switch to the **N°2** button layout **[LED1,LED2]** lights on.
Press **[+HOME]** to switch to the **N°3** button layout **[LED1,LED2,LED3]** lights on.
Press **[+HOME]** to switch to the **N°4** button layout **[LED1,LED2,LED3, and LED4]** are on.
Press **[+HOME]** to switch to the **N°1** button layout **[LED1]** light long on.

N°. of KeyLayout	Game Name	Switch Method	LEDIndication
N°4	PUBG	[+HOME]	[LED1,LED2,LED3,LED4]
N°3	LOL Mobile	[+HOME]	[LED1,LED2,LED3]
N°2	Call of Duty	[+HOME]	[LED1,LED2]
N°1	Mobile legend	[+HOME]	[LED1]

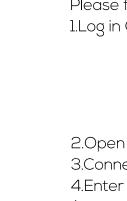 

 2.Open the Floating Window for "ShootingPlus".
3.Connect the controller to your android device. Open the App. ShootingPlus V3
4.Enter the game, press "START" Button on the controller to release the keymapping menu as below photo (take PUBG 910 for example)

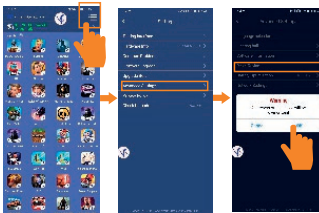

EDIT KEY CONFIGURATION

There is built-in memo chip in the game controller, it allows player to save the key configuration with 4 different mobile games, the 4 key configuration can be switched freely while playing games.
There is official key configuration for some games, if there is not key configuration for your game, you can set or revise the key configuration before gaming.

Please follow the steps to edit or revise key layout:
1.Log in Google Play Store to download the app" Shooting Plus " and install it to you android mobile/tablet pc.



2.Open the Floating Window for "ShootingPlus".
3.Connect the controller to your android device. Open the App. ShootingPlus V3
4.Enter the game, press "START" Button on the controller to release the keymapping menu as below photo (take PUBG 910 for example)



Step 1: Press **[X+HOME]** button to power on the gamepad, **[LED3]** will be twinkling and wait for pairing.
Step 2: Open the interface of **[Settings]** on android device, open **[Bluetooth]**.
Step 3: Scan the devices and get the name of **[GC2]** click the device into **[Pairing and Connect]** automatically.
Step 4: **[LED3]** indicator will be long on after connected successfully.

Reconnecting: Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:
1. The Android Game Controller mode allow player to play the android games from google play market, which the games can support game controller;

XBOX WIRELESS CONTROLLER MODE FOR ANDROID & IOS 13.0 ABOVE

Step 1: Press **[R1+HOME]** button to power on the gamepad, **[LED1,2,3]** will be twinkling and wait for pairing.
Step 2: Open the interface of **[Settings]** on android/IOS device, open **[Bluetooth]**.
Step 3: Scan the devices and get the name of **[Xbox Wireless Controller]** click the device into **[Pairing and Connect]** automatically.
Step 4: **[LED1,2,3]** indicator will be long on after connected successfully.

Reconnecting:
Step1: Press HOME (LOGO) button shortly to power on the gamepad.
Step2: Click the Xbox Wireless Controller device in the Bluetooth interface to reconnect.

MFI CONTROLLER MODE FOR IOS 13.0+

Step 1: Press **[B+HOME]** button to power on the gamepad, **[LED4]** will be twinkling and wait for pairing.
Step 2: Open the interface of **[Settings]** on android device, open **[Bluetooth]**.
Step 3: Scan the devices and get the name of **[DUALSHORCK4 Wireless Controller]** click the device into **[Pairing and Connect]** automatically.
Step 4: **[LED4]** indicator will be long on after connected successfully.

Reconnecting:
Press HOME button shortly to power on the gamepad, it will connect automatically.

 
Note:
Recommend the APP that collect the gamepad games already, you can need to download the app and installed.



N-S CONTROLLER MODE


(Power on your N-S Console, then follow the steps to pair and connect your controller.)

Step 1: Find **Controllers** Option.-**Image1**

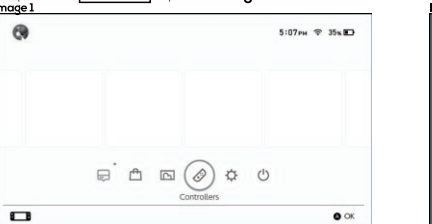

Step 2: Click **Change Grip/Order** -**Image2**

 Step 3: Press **L1+HOME** button to power on gamepad, until the 4 led lights blink in turn, waiting or connection to complete.-**Image3** 5-7s later, the controller will connect to console automatically.

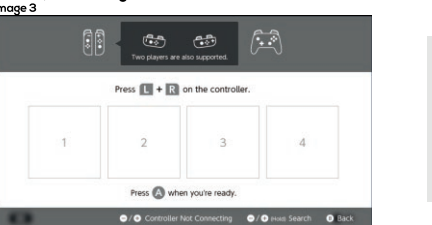

P4/P3 CONTROLLER MODE

Step 1: Connect the Controller to P4 / P3 console with TYPE-C cable.

The LED 1, LED 2, LED 3 will long on after console recognized.

Step 2: Press the HOME button to start pairing to console, LED turn to LED 4 flashes;

Step 3: Few seconds later, LED4 turns to long on. The controller connected to P4, P3 console;

Step 4: Plug off the cable, it will wireless connection.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.

UPDATE

 
 
If there is problem for the connection while the console update, we can offer the update method as follows:

You can download the "ShootingPlus V3" app from the google play or apple store, then install to your cellphone; follow the step to update your controller.

1.Connect android phone with ShootingPlus V3 Mode(A+HOME to power on);


2.Open the ShootingPlus V3 app,then follow the instruction to finish the update;

1. Upgrade
2. Reset
3. Change the console.

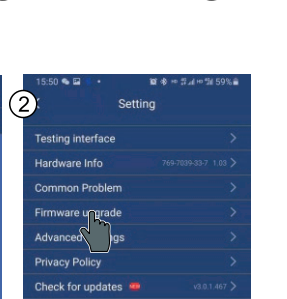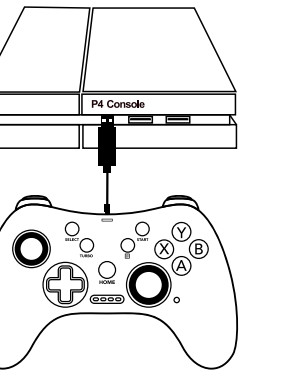


PC WIRED CONTROLLER MODE

 X-Input Mode

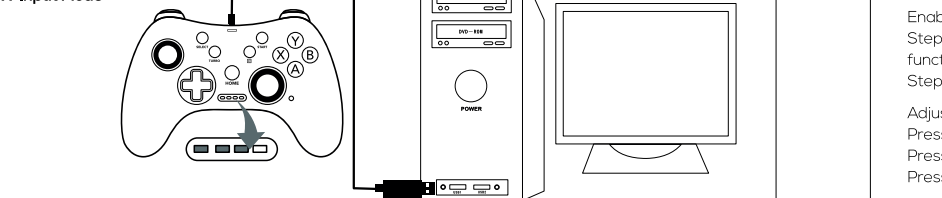

Connect controller to pc with type-c cable, after windows system recognized, the controller will start to work, LED 1, 2,3 light will be long on.

 D-Input Mode

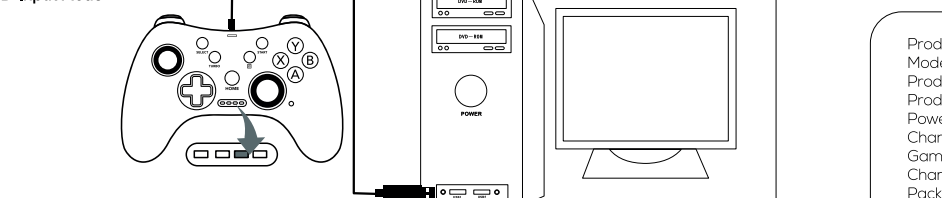

Under the mode of X-Input, press the HOME button long to switch X-Input to D-Input Mode.

TURBO / AUTO FUNCTION

Buttons (which called short function buttons) can be set TURBO : A/B/X/Y/L/ZL/R/ZR button

Enable/Disable the TURBO speed function:

Step 1: Press the Turbo button and one the function button simultaneously, to enable the Turbo speed function.

Step 2: Repeat the Step1 to disable TURBO function.

Adjust TURBO speed:

Press the TURBO button simultaneously the directional button Up / Down, Press TURBO+Direction UP button to adjust the TURBO to faster.

Press TURBO+Direction DOWN button to adjust the TURBO to slower.

Clear TURBO function:

 
Press the TURBO button with 5 second long, wait the LED1. 2. 3. 4 light and turn to flashes together with 1 second's vibration. Then all TURBO function cleared.

SPECIFICATIONS

Product name: Multifunctional gamepad
Model number: GC2
Product size: 152x115x58mm
Product weight: 220g
Power supply: built-in 800mAh polymer battery
Charging interface: Type-c
Game time: 5-10h
Charging time: 2-2.5H
Packing: color box
Package Contents: gamepad, charging cable, instruction manual

RESET

You must reset the controller while the situation of crash after charging or while playing games. Use the Pin to click the RESET hole to rest the controller.

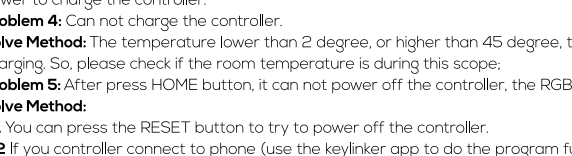


FAQ:

Problem 1: The LED4 do not flashes while the controller plug to Switch console basement.

Solve Method: The controller support wired switch controller function, If the pro controller wired communication function turn on ,while connect to N-S basement, the controller will turn to wired controller function after connected. The LED4 will not flashes! You need to turn off the pro controller wired communication, the LED4 will turn to normal.

 Panel to Close the Pro Controller Wired Communication

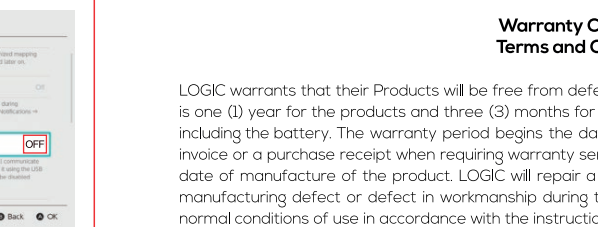

Problem 2: The Joystick stuck after long playing.

Solve Method: Press down the joystick head strong if there is stuck problem, it will solve the problem.

Problem 3: Can not full charged the Controller.

Solve Method: Press the RGB Control button to close the RGB lightings. We strongly recommend use the 5V1A power to charge the controller.

Problem 4: Can not charge the controller.

Solve Method: The temperature lower than 2 degree, or higher than 45 degree, the controller will stop the charging. So, please check if the room temperature is during this scope;

Problem 5: After press HOME button, it can not power off the controller, the RGB lights still on.

Solve Method:

5.1 You can press the RESET button to try to power off the controller.

5.2 If you controller connect to phone (use the keylinker app to do the program function, it will happen this situation.) Close the BT function on cellphone system, it will solve the problem.



Warranty Certificate Terms and Conditions

LOGIC warrants that their Products will be free from defects in material and workmanship. The warranty period is one (1) year for the products and three (3) months for the accessories which are part of the original package including the battery. The warranty period begins the date of purchase by the End-User who shall present an invoice or a purchase receipt when requiring warranty service otherwise the warranty period will begin from the date of manufacture of the product. LOGIC will repair a product without cost to the customer if it presents a manufacturing defect or defect in workmanship during the warranty period and if the defect occurred under normal conditions of use in accordance with the instructions and specifications stated in the user's manual. For additional information about the terms and conditions of LOGIC's Limited Warranty or to obtain warranty service information, please visit the support section at: logicmobility.com



*Please make sure turn off the Airplane Mode when you connect controller to switch console.



ES PRINCIPALES.....	18
DE SUSPENSIÓN Y RECONEXIÓN.....	18
AR.....	19
OL DE LUZ RGB.....	19
ANDROID V3 (MODO DE ASIGNACIÓN DE BOTONES).....	19
AR ASIGNACIÓN DE BOTONES.....	19
CONFIGURACIÓN DE BOTONES.....	20
DE CONTROL DE JUEGOS ANDROID.....	21
DE CONTROL INALÁMBRICO XBOX PARA ANDROID Y IOS 13.0 EN E.....	22
DE CONTROL MFI PARA IOS 13.0+.....	22
DE CONTROL N-S.....	23
DE CONTROL P4 / P3.....	24
ALIZACIÓN.....	24
DE CONTROL CON CABLE DE PC.....	25
ÓN TURBO / AUTOMÁTICA.....	26
IFICACIONES.....	26
IAR.....	26
JUNTAS FRECUENTES.....	27
IFICADO DE GARANTÍA.....	28

Diagrama de un controlador de videojuegos con las siguientes etiquetas:

- Puerto de Carga y Datos TIPO-C
- Botón L2
- Botón L1
- Botón TURBO
- Botón de Captura y @
- Botón R2
- Botón R1
- Botón - / COMPARTIR / SELECT
- Joystick Izquierdo
- Botón Y /△
- Botón X /⊗
- Botón B /⊙
- Botón A /⊘
- Botón DIRECCIONAL
- Botón SELECT
- TURBO
- START
- HOME
- Joystick Derecho
- Control RGB
- Botón de INICIO
- Indicador LED

Modo de Suspensión: El control pasará automáticamente al modo de suspensión luego de no presionar ningún botón en 5 minutos.

Reconexión: Presione el botón INICIO para volver a conectarse al último modo conectado.

Key Layout	Nombre de Juego	Método de Cambio	Indicador LED
	PUBG	+HOME	
	LOL Mobile	+HOME	
	Call of Duty	+HOME	
	Mobile legend	+HOME	

A screenshot of the game interface. At the top, there's a status bar with '100%' and '1.5x' indicators. Below it, a menu bar contains buttons: 'Default', 'New', 'Save', 'Close', and a trash icon. An orange arrow points to the 'Save' button. The game view shows a character in a green shirt in a grassy field with trees and a building in the background. The bottom of the screen features a control pad and several circular action buttons labeled R1, R2, L2, and L1.


Aplicaciones recomendadas, es probable que deba descargarlas e instalarlas.



MODO DE CONTROL N-S

(Encienda su consola N-S, luego siga los pasos para emparejar y conectar su control).

 
Paso 1: Ir a la opción de **controles**. -Imagen 1

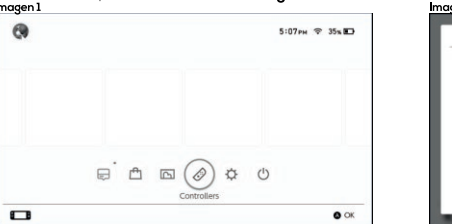

Step 2: Seleccione **Cambiar modo de sujeción u order**. -Imagen 2

Step 3: Presione L1 + HOME para encender el control, hasta que los 4 indicadores LED parpadeen a su vez y espere que se complete la conexión. -Imagen 3 5-7 segundos después, el control se conectará a la consola automáticamente.

 Image 3

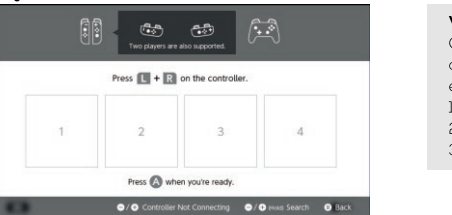

Volver a conectar:

presione el **botón INICIO**

Cuando ocurra una de las siguientes condiciones, vuelva a conectarse consultando el primer paso para emparejar y conectar.

1. Actualización
2. Reinicio
3. Cambio de consola

MODO DE CONTROL P4 / P3

Paso 1: Conecte el control a la consola P4/P3 con un cable TYPE-C. Los indicadores LED 1, LED 2, LED 3 permanecerán encendidos después de que se reconozca la consola.

Paso 2: Presione el botón INICIO para comenzar a emparejar la consola, el indicador LED 4 empezará a parpadear.

Paso 3: Unos segundos después, el LED 4 se encenderá por mucho tiempo. Esto indica que el control está conectado a la consola P4/P3.

Paso 4: Desconecte el cable ya que será una conexión inalámbrica.

Volver a conectar:

Presione el botón INICIO brevemente para encender el control, se conectará automáticamente.

ACTUALIZACIÓN

Si hay problemas con la conexión mientras se realiza una actualización, recomendamos lo siguiente:

Descargar la aplicación "ShootingPlus V3" desde Google Play o Apple Store y luego instalarla en su dispositivo; sigue los siguientes pasos para actualizar su control:

1. Conecte el dispositivo con el Modo ShootingPlus V3 (A + INICIO para encender);

2. Abra la aplicación ShootingPlus V3 y luego siga las instrucciones para finalizar la actualización.

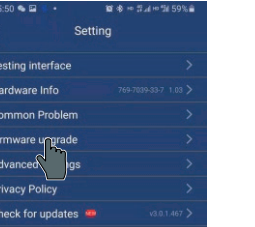 
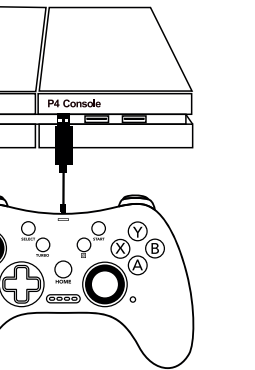 


Image 2

Image 3

Image 4

Image 5

Image 6

Image 7

Image 8

Image 9

Image 10

Image 11

Image 12

Image 13

Image 14

Image 15

Image 16

Image 17

Image 18

Image 19

Image 20

Image 21

Image 22

Image 23

Image 24

Image 25

Image 26

Image 27

Image 28

Image 29

Image 30

Image 31

Image 32

Image 33

Image 34

Image 35

Image 36

Image 37

Image 38

Image 39

Image 40

Image 41

Image 42

Image 43

Image 44

Image 45

Image 46

Image 47

Image 48

Image 49

Image 50

Image 51

Image 52

Image 53

Image 54

Image 55

Image 56

Image 57

Image 58

Image 59

Image 60

Image 61

Image 62

Image 63

Image 64

Image 65

Image 66

Image 67

Image 68

Image 69

Image 70

Image 71

Image 72

Image 73

Image 74

Image 75

Image 76

Image 77

Image 78

Image 79

Image 80

Image 81

Image 82

Image 83

Image 84

Image 85

Image 86

Image 87

Image 88

Image 89

Image 90

Image 91

Image 92

Image 93

Image 94

Image 95

Image 96

Image 97

Image 98

Image 99

Image 100

Image 101

Image 102

Image 103

Image 104

Image 105

Image 106

Image 107

Image 108

Image 109

Image 110

Image 111

Image 112

Image 113

Image 114

Image 115

Image 116

Image 117

Image 118

Image 119

Image 120

Image 121

Image 122

Image 123

Image 124

Image 125

Image 126

Image 127

Image 128

Image 129

Image 130

Image 131

Image 132

Image 133

Image 134

Image 135

Image 136

Image 137

Image 138

Image 139

Image 140

Image 141

Image 142

Image 143

Image 144

Image 145

Image 146

Image 147

Image 148

Image 149

Image 150

Image 151

Image 152

Image 153

Image 154

Image 155

Image 156

Image 157

Image 158

Image 159

Image 160

Image 161

Image 162

Image 163

Image 164

Image 165

Image 166

Image 167

Image 168

Image 169

Image 170

Image 171

Image 172

Image 173

Image 174

Image 175

Image 176

Image 177

Image 178

Image 179

Image 180

Image 181

Image 182

Image 183

Image 184

Image 185

Image 186

Image 187

Image 188

Image 189

Image 190

Image 191

Image 192

Image 193

Image 194

Image 195

Image 196

Image 197

Image 198

Image 199

Image 200

Image 201

Image 202

Image 203

Image 204

Image 205

Image 206

Image 207

Image 208

Image 209

Image 210

Image 211

Image 212

Image 213

Image 214

Image 215

Image 216

Image 217

Image 218

Image 219

Image 220

Image 221

Image 222

Image 223

Image 224

Image 225

Image 226

Image 227

Image 228

Image 229

Image 230

Image 231

Image 232

Image 233

Image 234

Image 235

Image 236

Image 237

Image 238

Image 239

Image 240

Image 241

Image 242

Image 243

Image 244

Image 245

Image 246

Image 247

Image 248

Image 249

Image 250

Image 251

Image 252

Image 253

Image 254

Image 255

Image 256

Image 257

Image 258

Image 259

Image 260

Image 261

Image 262

Image 263

Image 264

Image 265

Image 266

Image 267

Image 268

Image 269

Image 270

Image 271

Image 272

Image 273

Image 274

Image 275

Image 276

Image 277

Image 278