


LOGIC L-PAD PRO



USER MANUAL

1. HARDWARE OVERVIEW

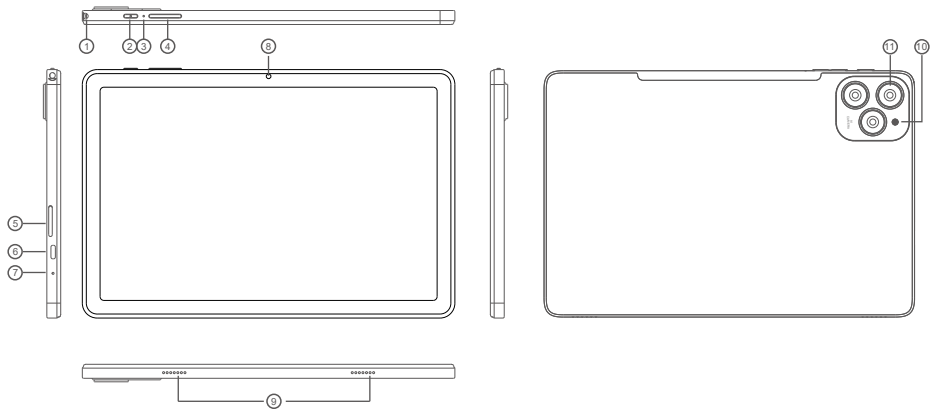

- ① 3.5mm Headphone Jack
- ② Power Button
- ③ Reset
- ④ Volume Buttons +/-
- ⑤ TF Card/SIM Card Slot
- ⑥ USB 2.0 Type-C Port

- ⑦ Microphone
- ⑧ Front Camera
- ⑨ Speakers
- ⑩ Flash Light
- ⑪ Rear Camera

2. SAFETY WARNINGS

- Do not disassemble the product or accessories.
- Do not use alcohol, thinner, or benzene to clean the surface of the device.
- The device should be charged for about 4 hours during the first three charge cycles.
- Do not store the device in places with high temperature, humidity, or dust. Avoid dropping or strong collision.
- Use an appropriate volume setting. High volume may cause hearing damage when using headphones.
- To charge the device, use the included USB cable and adapter.
- When transferring data to/from a computer, do not suddenly disconnect the cable; this may cause the device to malfunction. Use a "Safely Remove Hardware" or "Eject" function on the computer.
- Obey all local laws and regulations when using the device, such as when driving or aboard an aircraft.
- The device and included accessories are not water resistant or water proof.
- It is not recommended to leave the battery charging for more than 8 hours. Do not use the charger in a wet or humid environment. Only charge the tablet in a safe.

3. TECHNICAL SPECIFICATIONS

Operating System	Android 16.0
Display	10.1" Incell & IPS (HD)
Resolution	1280 x 800
RAM	4GB + 12GB Extended Max
ROM	128GB
CPU	Unisoc T310
Battery	6000mAh, Li-Ion Polymer
Ports	Type-C, ø3.5mm Standard Headphone Jack
Camera	5.0MP Front Camera, 5.0MP Rear Camera
Card Slot	Dual Nano SIM with Shard TF Slot
GPS	Yes
Voltage	5V/2A
Acceso a la Red	WiFi 2.4G and 5G, BT 5.0 4G: B2/3/4/5/7/8/17/28AB/38/66 3G: B1/2/5/8 2G: 850/900/1800/1900 MHz

4. TROUBLE SHOOTING

No.	ISSUE	FIX
1	Battery is draining too fast	Adjust screen brightness to a lower setting.
2	Slowness or unresponsive programs	Close unused apps; clear app cache.
3	Network connectivity issues; no Wi-Fi connection	Reset network connection; toggle airplane mode on/off.
4	Tablet is hot or overheating	Close unused apps; clear app cache.
5	App crashes	Reopen app; update app through play store.
6	Unresponsive screen	Restart tablet by holding power button for ~8 seconds.
7	Google Play Store crashes	Clear app cache and restart.
8	Apps won't download from Play Store	Clear Play Store cache; open app settings and clear local search.
9	Can't turn tablet on/off	Hold power button for Power Menu options.
10	Touch screen issue; not responding to	Low battery power; check for physical damage.
11	Battery does not hold a charge	Check power cable; inspect power button if stuck.
12	Sound is low	Check speaker port for blockage.
13	Camera or SD Card not working	Corrupt Software / Reset to factory default.
14	Download issues	Make sure it connect with PC properly. You'd better not to use the front USB port to connect to PC.
15	Device crashed or can't turn on	Once device crashed during the running time, It can be restarted via tap the RESET button at the side of device.
16	Out of run	Check the battery whether it out of charge. Checking after get connected to the power adapter. If it still can not turn on after charging, please contact the customer service center.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.681 W/Kg and when worn on the body, as described in this user guide, is 1.238 W/Kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: O5J105125 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation


This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

LOGIC L-PAD PRO



MANUAL DE USUARIO

1. DESCRIPCIÓN DEL PRODUCTO

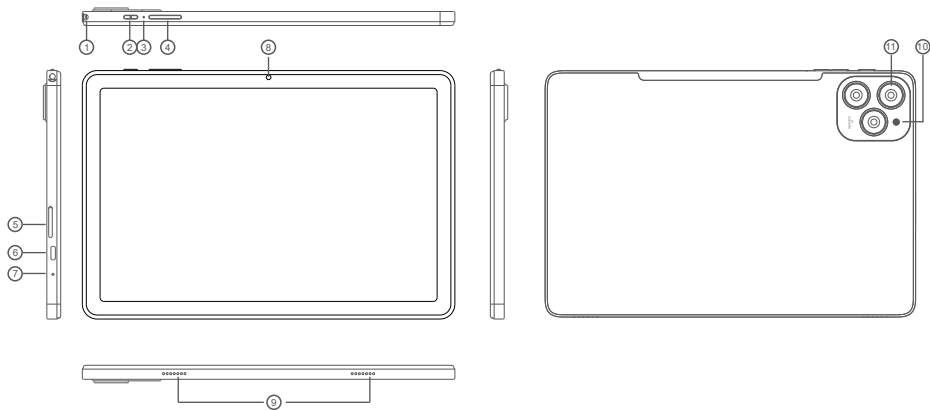

- | | |
|-------------------------------|------------------|
| ① Entrada de Audio Jack 3.5mm | ⑦ Micrófono |
| ② Botón de Encendido | ⑧ Cámara Frontal |
| ③ Reseteo | ⑨ Parlante |
| ④ Botón de Volumen +/- | ⑩ Luz Flash |
| ⑤ Ranura de TF Card/SIM Card | ⑪ Cámara Trasera |
| ⑥ Puerto USB 2.0 Tipo-C | |

2. ADVERTENCIAS DE SEGURIDAD

- No desarme el producto ni los accesorios.
- No utilice alcohol, diluyentes ni benceno para limpiar la superficie del dispositivo.
- El dispositivo debe cargarse durante aproximadamente 4 horas en los primeros tres ciclos de carga.
- No almacene el dispositivo en lugares con altas temperaturas, humedad o polvo. Evite caídas o golpes fuertes.
- Utilice un nivel de volumen adecuado. El volumen alto puede causar daños auditivos al usar auriculares.
- Para cargar el dispositivo, utilice el cable USB y el adaptador incluidos.
- Al transferir datos hacia o desde una computadora, no desconecte el cable de forma repentina, ya que esto puede causar un mal funcionamiento del dispositivo. Utilice la función "Quitar hardware con seguridad" o "Expulsar" en la computadora.
- Cumpla con todas las leyes y regulaciones locales al utilizar el dispositivo, como al conducir o a bordo de una aeronave.
- El dispositivo y los accesorios incluidos no son resistentes al agua ni impermeables.
- No se recomienda dejar la batería cargando por más de 8 horas. No utilice el cargador en un entorno húmedo o mojado. Cargue la tablet únicamente en un entorno seguro.

3. ESPECIFICACIONES TÉCNICAS

Sistema Operativo	Android 16.0
Pantalla	10.1" Incell & IPS (HD)
Resolución	1280 x 800
RAM	4GB + 12GB Máximo Extendido
ROM	128GB
CPU	Unisoc T310
Batería	Li-Ion Polymer de 6000mAh
Puertos	Tipo-C, Audio Jack de ø3.5mm
Cámara	Cámara Frontal de 5.0MP, Cámara Posterior de 5.0MP
Ranura da Tarjeta	Nano Doble SIM más Ranura para TF Card
GPS	Si
Voltaje	5V/2A
	WiFi 2.4G y 5G, BT 5.0 4G: B2/3/4/5/7/8/17/28AB/38/66 3G: B1/2/5/8 2G: 850/900/1800/1900 MHz

4. SOLUCIÓN DE PROBLEMAS

No.	PROBLEMAS	SOLUCIÓN
1	La batería se descarga demasiado rápido	Ajuste el brillo de la pantalla a un nivel más bajo.
2	Lentitud o apps que no responden	Cierre las aplicaciones no utilizadas; borre el caché de las aplicaciones.
3	Problemas con la conectividad de red; sin conexión Wi-Fi	Restablezca la conexión de red; active y desactive el modo avión.
4	La tableta se calienta o se nsobre calienta	Cierre las aplicaciones no utilizadas; borre el caché de las aplicaciones.
5	Apps se cierran inesperadamente	Vuelva a abrir la aplicación; actualicela a través de Play Store.
6	Pantalla sin respuesta	Reinicie la tablet manteniendo presionado el botón de encendido durante ~8 segundos.
7	Google Play Store se cierra inesperadamente	Borre la caché de la aplicación y reinicie.
8	Las aplicaciones no se descargan desde Play Store	Borre la caché de Play Store; abra la configuración de la aplicación y borre la búsqueda local
9	No se puede encender/apagar la tablet	Mantenga presionado el botón de encendido para acceder al menú de energía.
10	Problema con la pantalla táctil; no responde	Batería baja; verifique si hay daños físicos.
11	La batería no retiene la carga	Verifique el cable de alimentación; revise si el botón de encendido está atascado.
12	El sonido es bajo	Revise si el puerto del altavoz está obstruido.
13	La cámara o la tarjeta SD no funcionan	Software dañado / Restablecer a valores de fábrica..
14	Problemas de descarga	Asegúrese de que esté correctamente conectada a la PC. Se recomienda no usar el puerto USB frontal para conectarla a la PC
15	El dispositivo se bloqueó o no enciende	Si el dispositivo se bloquea durante el funcionamiento, puede reiniciarse presionando el botón RESET ubicado en el lateral del dispositivo.
16	Sin funcionamiento	Verifique si la batería está descargada. Conéctela al adaptador de corriente. Si aun después de cargarla no enciende, contacte al centro de atención al cliente.



Warranty Certificate Terms and Conditions

LOGIC warrants that their Products will be free from defects in material and workmanship. The warranty period is one (1) year for the products and three (3) months for the accessories which are part of the original package including the battery. The warranty period begins the date of purchase by the End-User who shall present an invoice or a purchase receipt when requiring warranty service otherwise the warranty period will begin from the date of manufacture of the product. LOGIC will repair a product without cost to the customer if it presents a manufacturing defect or defect in workmanship during the warranty period and if the defect occurred under normal conditions of use in accordance with the instructions and specifications stated in the user's manual.

For additional information about the terms and conditions of LOGIC's Limited Warranty or to obtain warranty service information, please visit the support section at: logicmobility.com

Certificado de Garantía Términos y Condiciones

LOGIC garantiza que sus productos estarán libres de defectos de materia prima y ensamblaje. El periodo de garantía es de un (1) año para los productos y de tres (3) meses para los accesorios que forman parte del paquete original incluyendo la batería. El usuario final deberá presentar una factura o un recibo de compra cuando exija el servicio de garantía, de lo contrario el periodo de garantía comenzará a partir de la fecha de fabricación del producto. LOGIC reparará un producto, sin costo para el cliente si presenta un defecto de fabricación o un defecto de ensamblaje durante el periodo de garantía y si el defecto se produjo en condiciones normales de uso de acuerdo con las instrucciones y especificaciones indicadas en el manual del usuario.

Para más detalles de la Garantía Limitada de LOGIC y para obtener información del servicio de garantía, por favor visite la sección de soporte en nuestro sitio web: logicmobility.com.

logicmobility.com

Made in China    

Copyright Swagtek, Inc. 2026